



An example of the *Exclusion Booming Tactic*. Actual deployment should be adjusted for local conditions.

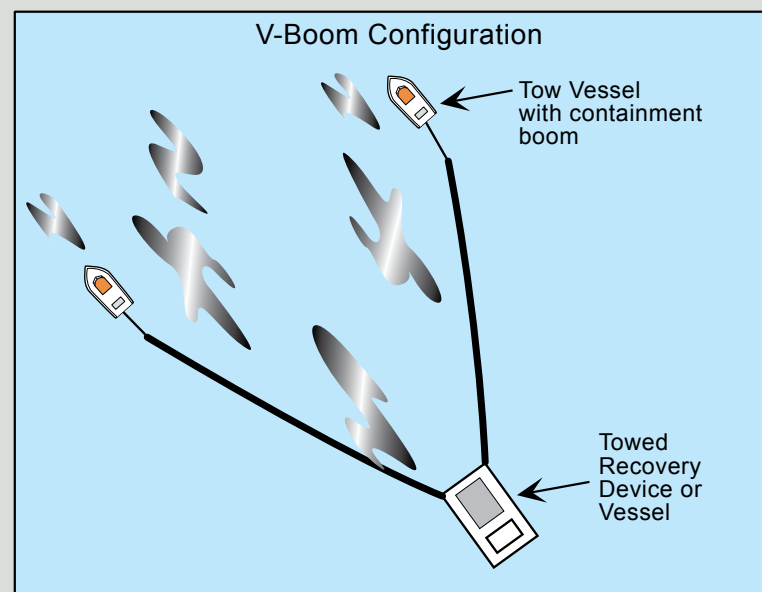

An example of the *Free-oil Recovery Tactic*. Actual deployment should be adjusted for local conditions.

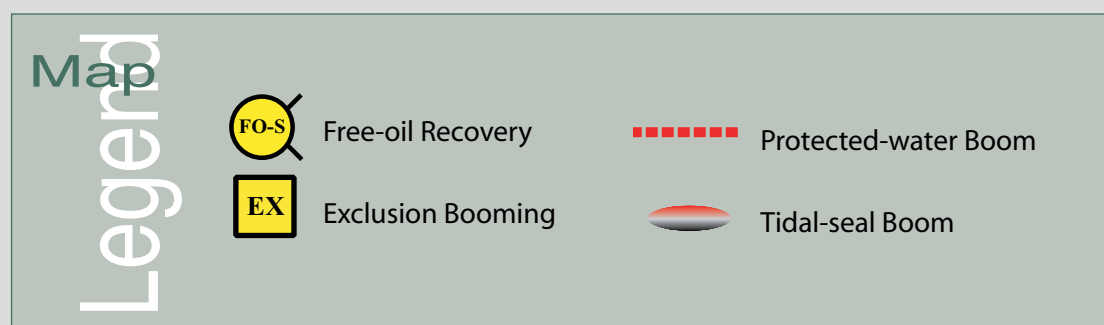


Aerial photography of this area is unavailable at this time, but may be included as it becomes available.

Geographic Response Strategies for Western Alaska Subarea, Island Zone

Nash Harbor, WAK-106

Center of map at 60° 13.06' N Lat., 166° 52.90' W Lon.

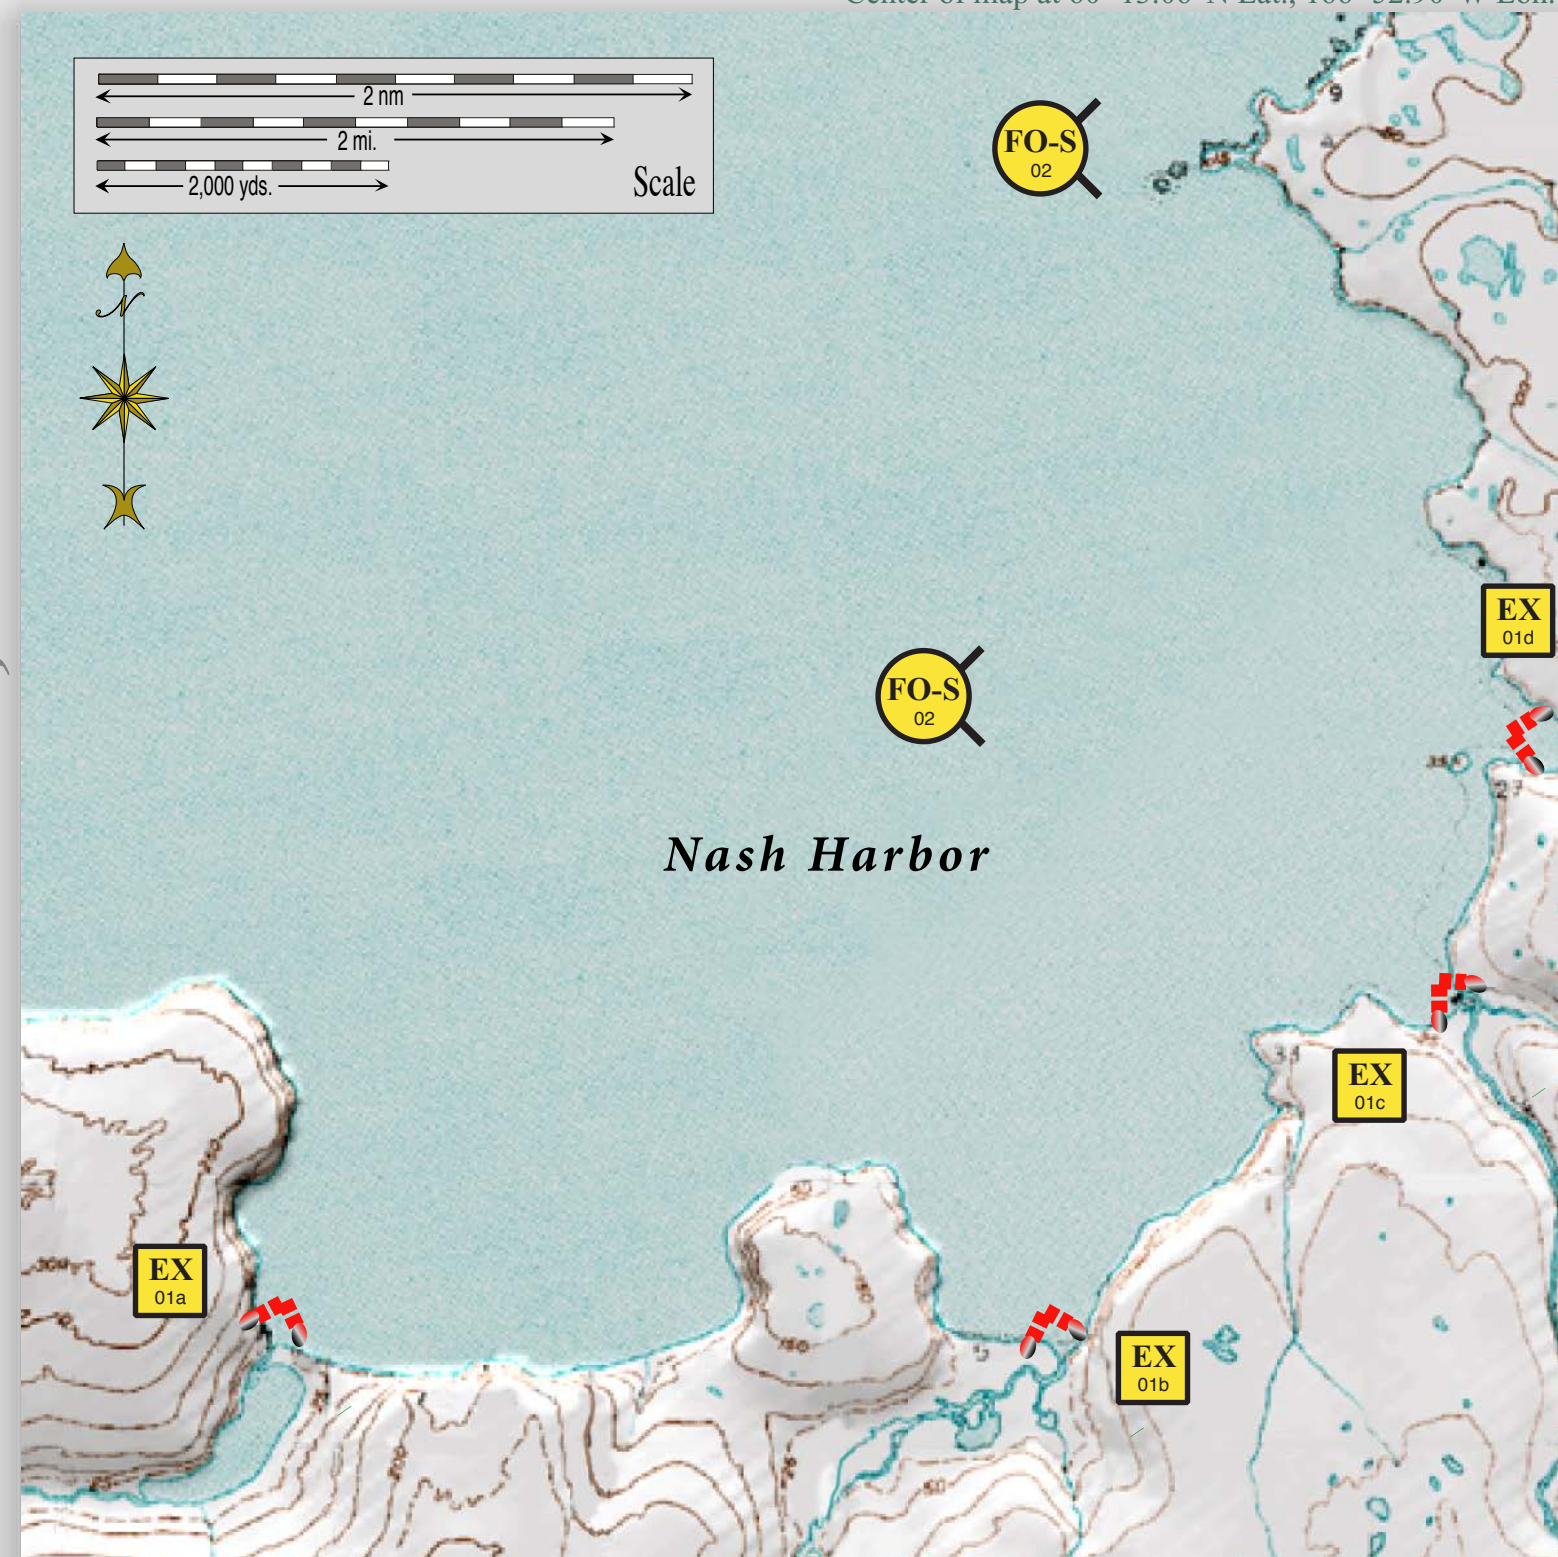

This is not intended for navigational use.

ID	Location and Description	Response Strategy	Implementation	Response Resources	Staging Area	Site Access	Resources Protected (months)	Special Considerations
I-06-01 <div>EX</div>	Nash Harbor a. Lat. 60° 12.29'N Lon. 166°56.34'W b. Lat. 60° 12.19'N Lon. 166°51.10'W c. Lat. 60° 13.38'N Lon. 166°48.45'W d. Lat. 60° 14.20'N Lon. 166°47.70'W	Exclusion Exclude oil from impacting the identified streams in Nash Harbor.	Deploy anchors and boom with skiffs (class 6) at high tide. Place protected water boom in a chevron pattern in front of the entrances to the streams. Complete each array by placing 60 ft. of tidal seal boom on each leg. Tend throughout the tide. Boom Lengths: a. 250 ft b. 200 ft c. 400 ft d. 200 ft	Deployment Equipment 1050 ft. protected-water boom 480 ft. tidal seal boom 5 ea. anchor systems 16 anchor stakes Vessels 1 ea. class 3 2 ea. class 6 Personnel/Shift 7 ea. vessel crew/general techs Tending Vessels 1 ea. class 3 1 ea. class 6 Personnel/Shift 3 ea. vessel crew/general techs	Vessel Platform	Via marine waters Chart 16006	Fish- intertidal spawning-salmon (June-Sept.)dolly varden, arctic char Birds-waterfowl, seabird and shorebird nesting Habitat- exposed rocky shore, marsh, peat shoreline, Exposed wavecut platform, sheltered tidal flats Human use-subsistence	Vessel master should have local knowledge. Title 41 permitting required from ADNRR. Surveyed: not yet Tested: not yet
I-06-02 <div>FO-S</div>	Nash Harbor Nearshore waters in the general area of: Lat. 60° 13.06'N Lon. 166°52.90'W	Free-oil Recovery Maximize free-oil recovery in the offshore & nearshore environment of Nash Harbor depending on spill location and trajectory.	Deploy free-oil recovery strike teams upwind and up current of the Nash Harbor. Use aerial surveillance to locate incoming slicks.	Deploy multiple free-oil recovery strike teams as required to maximize interception of oil before it impacts sensitive areas.	Mekoryuk	Via marine waters Chart 16006	Same as I-06-01	Vessel master should have local knowledge. Use extreme caution, shallow waters with numerous submerged hazards.

NOTE: Sensitive resource information can be found on other maps which can be accessed through the sensitive area section of the Western Alaska Subarea Contingency Plan: http://dec.alaska.gov/spar/perp/plans/scp_wak.htm.